Installation Instructions
AR SPACER/TWISTER
Anti-Galloping System

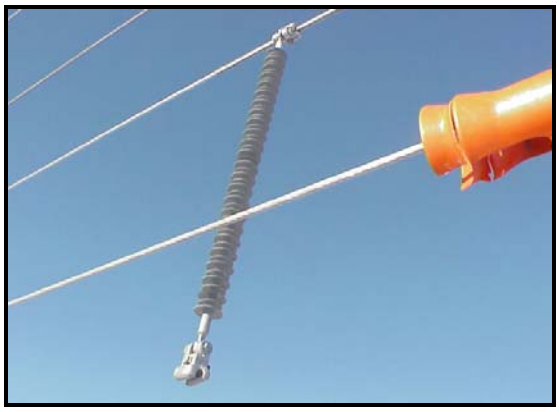

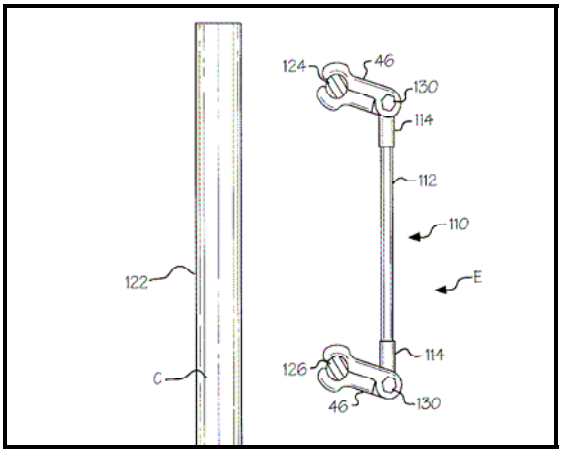

Step (1)

Install AR MOD VI Clamp assembly to each end of the phase spacer/insulator. The tongue fitting on the spacer/insulator attaches to the clamp/bolt assembly in between the two flat washers located in the middle of the clamp assembly. Tighten lock-nut to where three threads are showing at end of bolt. Do not over-tighten lock-nut.

Step (2)

Locate the 1/3 span point plus/minus 10 feet within span. Install one AR SPACER/TWISTER unit connecting top and bottom phase at the 1/3 span point, *over furnished Helical Line armor rods if required*.

Step (3)

Position the AR SPACER/TWISTER as shown above, where the spacer/insulator is outside of the conductor away from tower structure. Tighten lock-nut on clamp to flatten split-lock washer with torque of 50-55 ft.-lbs.